

AXENT
SWITZERLAND



AXENT.ONE / AXENT.ONE^{PLUS}

CLEANING AND CARE

Art. E81.0500.0001.9

Art. E81.0510.0001.9

CLEANING INSTRUCTIONS CERAMIC

Under no circumstances should you use harsh or abrasive cleaning substances such as abrasive cream cleansers, scouring powder or drain cleaner on your ceramic surfaces. Also avoid using steam cleaners and hard, abrasive sponges. Please bear in mind that hair colouring products can reduce the effectiveness of AXENT Easy Clean.

If you follow this guidance then you should remain satisfied with the performance of AXENT Easy Clean for many years. Recommended cleaners for sanitary ceramic surfaces with AXENT Easy Clean finish. The use of acidic cleaners with a pH value between 1 and 4 is highly recommended. Cleaners with a pH value in the neutral range (5 to 8) are not always suitable. We strongly advise against using either weak or strong alkaline cleaners, i.e. substances with pH values from 9 to 12.

CLEANING INSTRUCTIONS SEAT, LID AND REAR COVER

To continue enjoying your toilet seat and lid for as long as possible, please follow these care tips.

Clean them regularly and promptly to prevent stubborn mineral stains.
The toilet seat and lid can be removed, cleaned and refitted quickly and easily.

Clean surfaces thoroughly with a soft cloth (cotton, not microfibre).

- Use clear, warm water, and a bit of gentle detergent to remove heavier soiling.
- Do not use spray cleaners or microfibre cloths.
- Leave the toilet seat and lid open while the detergent acts on ceramic surfaces.
- Do not use detergents that foam or contain chlorine.
- Wipe the hinges dry.



REMOVING THE TOILET SEAT AND LID

1. Open the seat and lid.
2. Pull the seat and lid vertically upwards out of the fixture at an angle of 90°.



The seat of the AXENT.ONE^{PLUS} contains electronics, therefore do not immerse or rinse in water!



FITTING THE TOILET SEAT AND LID

Insert the toilet seat and lid vertically from above.

1. First push the left-hand bolt of the seat into the hinge.
2. Press and hold the right-hand bolt of the seat.
3. Push the toilet seat and lid down until they click into place in the hinge.



CLEANING HINGES

To ensure your shower toilet functions perfectly, the fixture (bolts and hinges) must be cleaned regularly.

1. Remove the toilet seat and lid as per the instructions.
2. Clean the hinges of the rear cover with a damp cloth (cotton, not microfibre), then dry.
3. Clean the bolts of the toilet seat and lid with a damp cloth (cotton, not microfibre), then dry.

CLEANING



Every 4 months, the night light flashes red to let you know that all parts in contact with water need to be descaled.

After the descaling process, perform a system reset, this resets the red night light indicator.

 


SYSTEM RESET


Settings mode is active.

1. Press and hold Temperature $^{\circ}\text{C}$ and press Water Volume  once.
2. Stop  flashes three times.
3. The settings of the remote control and the device are reset to the factory settings.

Activating settings mode

1. Press and hold Stop  and also press Temperature $^{\circ}\text{C}$ until the LED display flashes slowly.
2. The AXENT logo lights up without flashing.
3. You are now in settings mode.

Exiting settings mode

1. Press Stop  to exit settings mode.






The setting mode is automatically terminated after 3 minutes of inactivity.



CLEANING THE SPRAY ARM

The stainless steel spray arm should be cleaned at regular intervals.

Settings mode is active.

1. Press Spray Arm Position .
2. The spray arm extends without spraying any water.
3. Clean the spray arm with a soft cloth (cotton, not microfibre) or a soft brush, without exerting any pressure.
4. To finish, press Spray Arm Position  or Stop . The spray arm moves back to its starting position.




DESCALING PROGRAMME

The entire water system can be descaled as easily as a coffee machine.

Fill a container with 200 ml liquid descaler (preferably Durgol, dilute if necessary as per manufacturer's instructions).

Settings mode is active.

1. Press Flow Rate .
The process starts and the water system is fully emptied.
The spray arm extends without spraying any water.
2. Immerse the spray arm in the container of liquid descaler.
3. The liquid is absorbed.
4. The spray arm moves back to its starting position. The liquid descaler circulates all around the water system and dissolves any limescale.
5. The liquid descaler is flushed away automatically.
The entire water system is purged six times with fresh water.
This process takes about 6 minutes.
The night light flashes slowly throughout this process.



 YouTube



Do not interrupt the descaling programme once it has started.

REMOTE CONTROL



CLEANING THE REMOTE CONTROL

Wipe the remote control with a soft cloth (cotton, not microfibre).

REPLACING THE BATTERIES OF THE REMOTE CONTROL

If the AXENT logo is flashing, the batteries need to be changed soon.

The remote control requires three 1.5 V LR3 / AAA batteries.

1. Open the cover on the back of the remote control.
2. Take out the empty batteries and insert new ones. Ensure they are the right way round.

CLEANING RECOMMENDATION

Cleaning interval

Cleaning steps

Regularly

- Wipe off drops of water with a soft, dry cloth (cotton, not microfibre).

Weekly/monthly

- Remove the toilet seat and lid and clean them separately.
- Clean the hinges and bolts of the toilet seat and lid with a damp cloth, then dry.
- Wipe all surfaces and corners thoroughly with a soft, damp cloth (cotton, not microfibre) and a gentle liquid detergent.
- Inspect the spray arm for signs of scale.

Quarterly

- Run the descaling programme.

AXENT GUIDE – THE PRACTICAL ADVISOR

This app means you always have the right partner close at hand:

From tutorials on all features and settings, to FAQs, end user warranties, operation instructions and tips on maintenance – this app offers customers all the information they will ever need.



AXENT International AG

info@axentbath.ch
www.axentbath.ch